

Test Unit Type GTU8



- Portable test unit
- Monitoring of Dupline® channel status
- LCD-display
- 12-key tactile keyboard
- Supplied by Dupline®
- Transmission latch
- Dual-group reading
- Analog BCD reading
- Split I/O channel reading

Product Description

Test unit for Dupline® modules and networks. Monitoring/control unit with LCD-display.

Highly recommended for Dupline® system start-up, troubleshooting and maintenance.

Type Selection

Supply

Supplied by Dupline®

Ordering no. Test unit

GTU8

Ordering Key

GTU8

Type: Dupline®

Type no. _____

Supply Specifications

Power supply

Reverse-polarity protection
Rated operational current

Supplied by Dupline®

Yes
< 4.0 mA

Product Specifications

Output Connection	Dupline 3 mm Jack socket
Display Type Height of dots	2 x 16 characters LCD 5 mm
Keyboard No. of keys Channel keys Command keys	Tactile keys 12 1-8 « ↑ » « ↓ » (scroll up/down) « MODE », « ENTER »
Cable 1 GTU8 connector Dupline® connector Signal Common	GTU8 to Dupline® 3 mm Jack plug 2 mini grips Red Black
Cable 2 GTU8 connector Dupline® connector	GTU8 to ASIC module 3 mm Jack plug 1 6/6 modular plug

General Specifications

Environment Degree of protection Pollution degree Operating temperature Storage temperature	IP 40 3 (IEC 60664) 0° to +50°C (+32° to +122°F) -20° to +60°C (-4° to +140°F)
Humidity (non-condensing)	20 to 80%
Mechanical resistance Shock Vibration	15 G (11 ms) 2 G (6 to 55 Hz)
Dimensions (l x w x d)	145 x 90 x 28 mm
Material	ABS, grey
Weight	250 g

Mode of Operation

128-channel portable transmitter/receiver unit supplied by Dupline®. The GTU8 can be used anywhere along the two wires to monitor and control the status of Dupline® channels. This unit is highly recommended for start-up and maintenance work on Dupline® systems.

The GTU8 can operate in 5 different modes:

- Digital 1 group
- Digital 2 groups
- Edit Tx-latch
- Analog BCD
- Split I/O

The start-up mode is "Digital 1 group".

To change mode:

1. Press « Mode »
2. Shift between mode options by pressing either « ↑ » or « ↓ ».
3. Select mode by pressing « Enter ».

Digital 1 group

Once connected to the Dupline®, the display shows the status of channel group A. Active channels are indicated by their numbers. Pressing «1», «2» ... «8» will activate the corresponding Dupline channel in the selected channel group.

Pressing « ↑ » or « ↓ » changes the channel group shown in the display.

Digital 2 groups

When the mode "Digital 2 groups" is selected, the user may select an additional channel group for permanent monitoring on the bottom line of the display. The channel status of the two selected groups can now be monitored, but changing the channel status through the keys «1» ... «8» only affects the channels displayed in the upper row of the display. Even so, pressing the « ↑ » or « ↓ » key only changes the channel group in the upper row of the display.

Edit Tx-latch

In this mode it is possible to "latch" the activation of one or more channels. This means that the GTU8 will continue transmitting on the channel(s) even though the corresponding transmission button is released.

To cancel the transmission on a channel, press the corresponding transmission button again.

The latched transmission will continue even if the channel group or mode is changed. In order to change the status of a latched transmission, it is necessary to re-enter the "Edit Tx-latch" mode.

All the latched channels are reset to normal Dupline® operation whenever the GTU8 becomes disconnected from the Dupline®.

Analog BCD

In this mode it is possible to monitor values from analog transmitters that use the multiplexed 3 1/2-digit BCD format. The analog values are shown as BCD numbers within the range of -1999 to 1999.

By pressing « ↑ » or « ↓ » the group addresses can be changed. By keeping « Enter » pressed while activating « ↑ » or « ↓ », the multiplex address will change instead.

The display will show "Wait" until the selected multiplex address has been present on channels A1-A4.

If no analog value is transmitted on the selected address, the display will show: "None".

If the analog value on the selected address is not valid, the display will show: "Error". If the multiplex address "OFF" is selected, the display will show the analog value transmitted on the selected channel groups disregarding the multiplex address.

"OFF" should be selected when the analog transmitters are used in non-multiplexed mode.

If a specific analog transmitter is to be tested, it is possible to set up its multiplex address in "Tx-latch" mode and then go back to the "Analog BCD" mode to monitor the value.

Split I/O

In this mode it is possible to see the status of split I/O channels.

The upper row in the display shows the output from the master generator.

The lower row in the display shows inputs from Dupline units to the master generator.


By pressing « ↑ » or « ↓ » the group addresses can be changed.

Pressing «1», «2» ... «8» will activate the corresponding Dupline channel in the selected channel group.

Warning: Do not plug or unplug the Jack connector when the GTU8 is connected to Dupline®. This will cause a short-circuit of the two wires.

Note: If the Dupline® carrier is missing, the display will not turn on.

Wiring Diagram

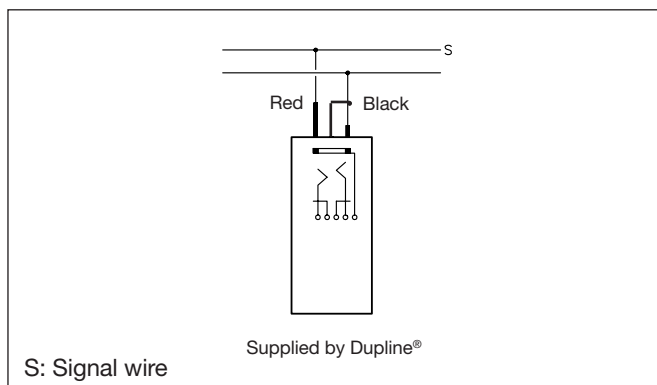

Additional Information

Scope of supply

- 1 x Test unit
- 1 x Cable 1 (mini grips)
- 1 x Cable 2

- GTU8
- GTU8 - GRIP - CAB
- GTU8 - ASIC - CAB